



HZH MARINE GROUP CO., LTD.

# Tumble Dryer USER MANUAL

8.0kg

Applicable Models

**OC-GYJ8022**

## PREFACE

Thank you for choosing our dryers. Please read this manual carefully. It provides instruction, use, and maintenance. Retain it for future reference. Record the model and serial numbers of your machine. Quote this information to your dealer if you require service.

The following symbols are used in this manual:


 Important information concerning your personal safety and information on how to avoid damaging the appliance

 General information and tips

 Environmental information

Thank you for choosing our dryer.  
Please read this off OWNER'S MANUAL carefully prior to using and keep it for further reference.

## Warning

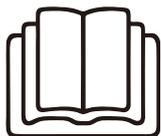

# CAUTION!

**Read the instruction manual before using this product!**



**1. WARNING: Regularly clean the lint trap.**

2. Do not place anything in front of the vent hole;
3. keep it clear of obstructions .
4. Only dry fabrics that have been cleaned in water.
5. Keep children away from the appliance during operation.
6. Do not hang anything on the appliance door.
7. Do not look into the vent when the dryer is running .



## WARNING!

To avoid a fire hazard, do not dry flammable articles, or items containing foam, rubber or material on which you have used a cleaning solvent or which contains flammable liquids or solids (such as petrol, kerosene, vegetable or cooking oils, waxes, etc.).

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or

instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. This appliance is not intended for use by persons ( including children ) with reduced physical , sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety

Children should be supervised to ensure that they do not play with the appliance.

4. the tumble dryer is not to be used if industrial chemicals have been used for cleaning.

5. the lint trap has to be cleaned frequently.

6. lint must not to be allowed to accumulate around the tumble dryer.

7.adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires

- Do not dry unwashed items in the tumble dryer .

- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

- Fabric softeners , or similar products , should be used as specified by the fabric softener instructions .

- Remove all objects from pockets such as lighters and matches

9. WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

10.

- for appliances with ventilation openings in the base, that a carpet must not obstruct the openings;

- that exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels

- that the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

11

-Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the. oil . Oxidation creates heat . If the heat cannot escape , the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.




## **⚠ CAUTION**

- To ensure the dryer correct and safe use, please read this manual carefully before installation and use for the first time. In order to avoid unnecessary errors and accidents, every user should be fully familiar with the operation and safety of the machine. Please keep this manual properly and attach it to it when handling or reselling, so that each user can use the machine correctly and safely.
- The company will not be responsible for any failure and loss caused by non-compliance with the installation instructions.




### **Danger! Electricity!**

- It is very dangerous not to use it or disassemble and assemble it by yourself.
- Unless there is a person who knows the safety knowledge for supervision and guidance, who is not familiar with the operation or lacks the operation knowledge and experience (including children).
- Be sure to remove hard objects such as keys, pins, coins, hairpins, and sand.

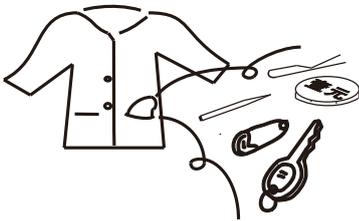

- In order to prevent fire caused by excessive drying, please do not use this machine to dry the following items: mattresses, quilts, etc. (highly sensitive items).
- The following items, such as foam, waterproof clothes or down clothes, cotton cushion, pillow, etc., cannot be dried in the dryer.
- After finishing using, the power must be disconnected before cleaning and maintenance.
- Under no circumstances can you repair the machine by yourself to avoid damage and accidents. If you have any questions, please contact the local after-sales service.

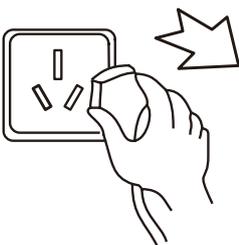



### **Danger! Explosion!**

- After the clothes are mixed with acetone, gasoline, detergent, turpentine, wax or dewaxing agent, detergent should be added into hot water to wash and dehydrate before being put into the dryer for drying.
- Explosion hazard: clothes containing flammable substances (such as gasoline, alcohol, desiccant, etc.) should not be dried in the barrel, because these substances may cause explosion.



### **Danger! Fire!**

- Don't put the clothes with oil into the dryer.
- Make sure you don't leave things like matches or lighters in your clothes and put them into the dryer.



### **⚠ WARNING**

- Do not stop the machine during drying unless the clothes can be quickly taken out of the machine to dissipate heat and prevent fire.




### **INSTALLATION**

- Please take extra care when moving the machine. Check whether the machine is damaged when unpacking.
- If you have any questions, please do not use it and contact the local after-sales service center.
- The circuit installation of the machine must be completed by qualified electricians or electrical

professionals.

- Make sure that the rated current of the machine power supply is greater than 10A.
- Do not share the plug with other high-power appliances. Be sure not to put the machine on the power cord.
- If the machine is placed on a blanket or floor, adjust the soles of the feet to allow air to circulate at the bottom.
- After the dryer is installed, check that the machine is pressing on the power cords or ventilation ducts.

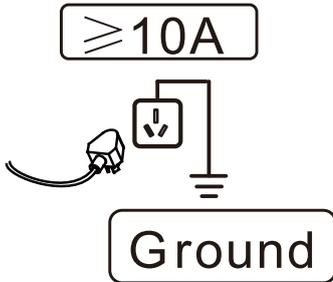


### **! CAUTION**

- This machine is only suitable for home use.
- The machine is only suitable for clothes that can be dried by the machine. Please check the label of clothing.
- Please don't leave the drying clothes in the dryer for a long time.
- Dry clothes should not exceed the rated capacity of the machine.
- Before drying clothes, you need to use the washing machine to dehydrate. Do not put the dripping clothes into the dryer.
- Clothes exposed to volatile petroleum products should not be dried with this machine.
- If the wiring, panel or the bottom of the machine is damaged and easy to contact the internal components, do not use the machine.

### **CHILD SAFETY!**


- Children or people with physical or mental disabilities cannot use the machine without supervision.
- Children in need of supervision cannot play with this machine.
- Prevent children or pets from crawling into the dryer barrel.
- Packaging materials (such as polystyrene, plastic film, etc.) are dangerous for children to suffocate. Do not let children touch these items.

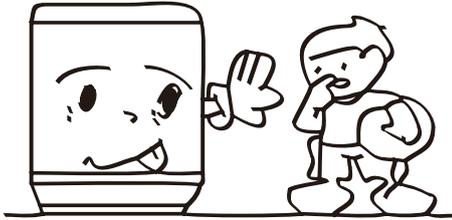

## INSTALLATION


### 1. DRYER INSTALLATION

- Dryer should be installed in a well ventilated place, not in the open air or wet place.
- When the back is against the wall, it is not allowed to be close to the curtain, or there are objects floating with the wind. It is required that the distance from the wall is not less than 10 cm, so as to facilitate the installation of exhaust pipe.
- Do not install in sealed rooms. (Such as bathroom, washroom, etc.)
- At least 1.5 meters in front of the dryer is required. Keep clear of obstacles and keep ventilation.
- Do not install dryers where gasoline or flammable materials are stored.

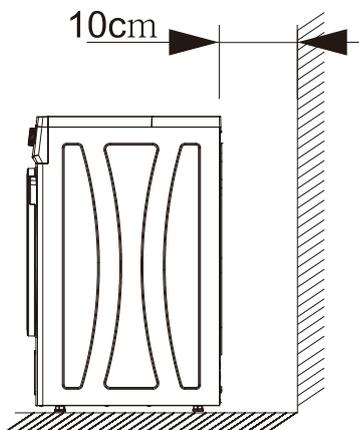


### DRYER HORIZONTAL ADJUSTMENT

- When the dryer is installed on the ground, place the dryer on a flat surface. If one of the four feet is uneven, you can adjust the sole of the foot. If the dryer is not placed horizontally (the gradient of the ground is more than 2 degrees), the machine may run unsteadily or stop halfway.

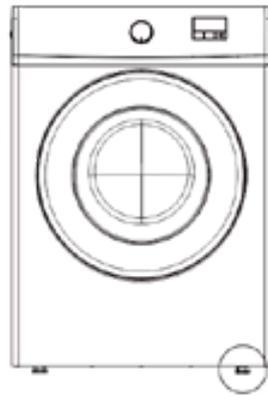


## AIR OUTLET PIPE INSTALLATION


- Align one end of the threaded nozzle with the air outlet on the back of the dryer, insert it, and then screw it clockwise. Move the other end of the exhaust pipe to one side (2), or extend from the window or wall opening to the outside. Install correctly, as shown in (3).

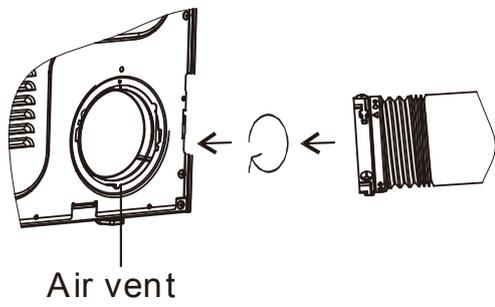

2

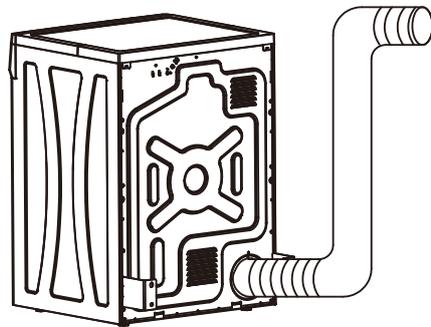

3

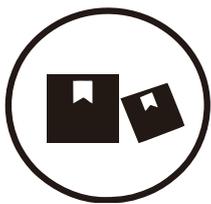


## ACCESSORIES


1	User manual	
2	Air duct	




## COMPONENTS

- The company reserves the right to change the product design. The product you purchased may be improved and not completely consistent with the manual, but the performance and use method will not be changed.
- The front air outlet, rear air outlet, shoe rack, inverted rack and inverted bracket are selected according to different models. Some models may not have them.

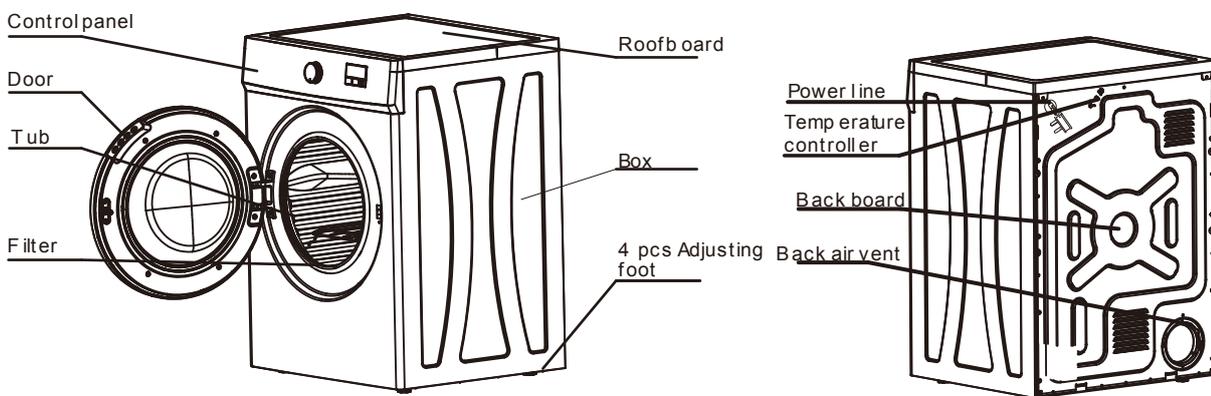

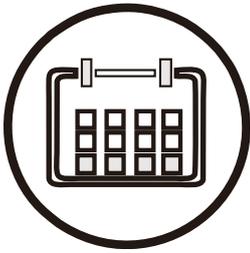


## CONTROL PANEL

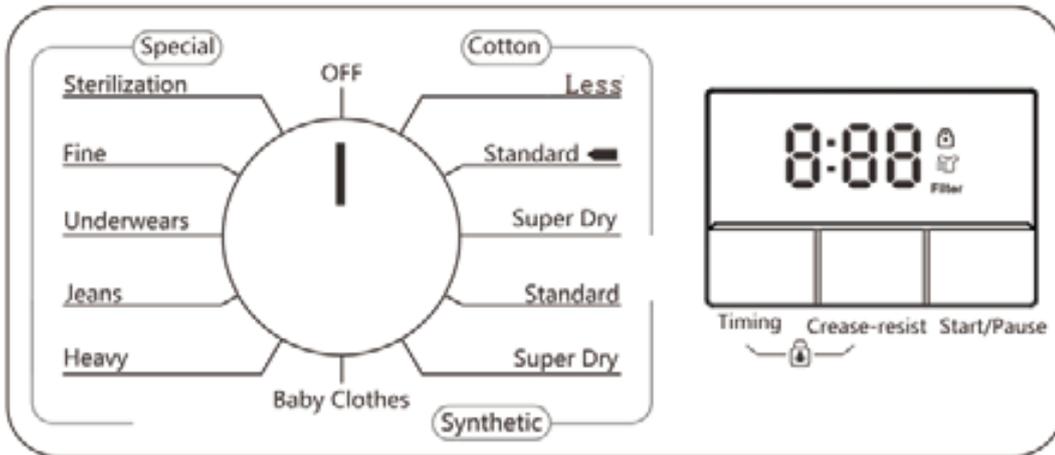

- ON/OFF: turn on the machine and tap to turn off machine.
- STENILIZATION: for a small amount of clothing disinfection.
- FINE: for meticulous clothing.
- UNDERWEAR: for underwear.
- JEANS: for jeans.
- Heavy: Large items of clothing do not include quilts or similar items.
- BABY CLOTHES: for baby clothes.
- SYNTHETIC: for chemical synthetic fabrics.
- COTTON: for cotton-ramie fabrics.
- LESS: A small amount of clothes
- Standard: Clothes are suitable for wearing.
- Super Dry:over dry.
- START/PAUSE: Start the machine and pause the machine.
- TIMING: 30, 50, 70, 90 minutes of regular drying.
- CREASE-RESIST: After the automatic drying, the dry clothes can not be taken out in time. The anti-wrinkling light is on when selecting.
- FILTER: After each use, the indicator light of the filter screen lights up, and clean the filter screen. The warning light will be off next time.
- CHILD LOCK: Child lock.



## Guide

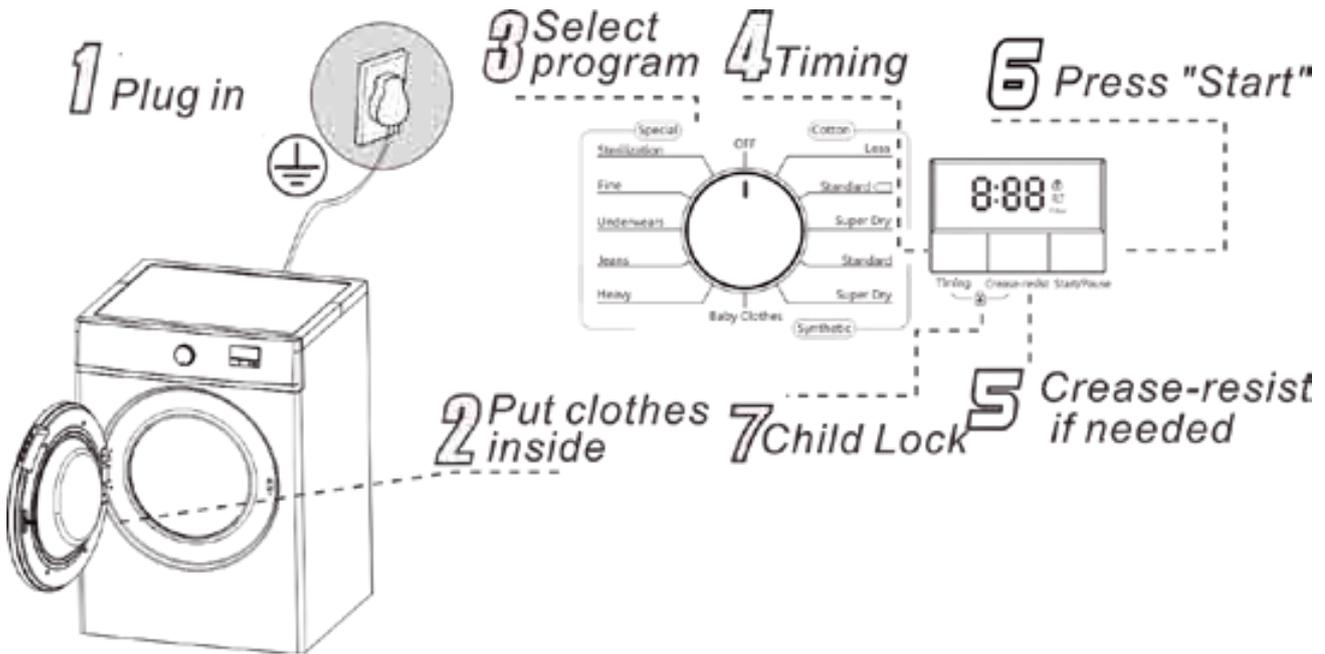

Machine will be off automatically after drying program



## USE AND FUNCTIONS

### 1. FIRST USE

- Please take out everything in the barrel.
- Please connect the circuit according to the installation instructions.
- It is recommended to clean the inner barrel with a wet cloth when using it for the first time, because there may be some dust in the inner barrel.

## **2. TURN ON ELECTRICITY**

- After turn on the power and open the door.
- Shake the clothes and put them into the bucket. Shake them as evenly as possible.
- Close the door and check that the clothing is not stuck between the door or the filter screen, otherwise it is easy to tear the clothes.

## **3. SELECT PROGRAM**

- Turn the program knob to the required program position, and the display will shows the approximate time according to different programs. If the "START/PAUSE" button is not pressed within two minutes. Then the machine will go into sleep state and can only be activated by turning the knob again. During the working process of the machine, the ":" on the display will keep flashing.

## **4. AUTOMATIC DRYING CONTROL**

- Select the appropriate program according to the type of clothes, and then press the "START/PAUSE" button, the machine will automatically detect the humidity of clothes, automatically adjust the time according to the humidity of clothes, and automatically shut down after drying.

## **5. CONTROL DRYING TIME**

- According to your own needs, you can choose 30, 50, 70, 90 minutes of drying time. This procedure is suitable for drying a small amount of clothing. If you want to stop the program, you can directly tap the "ON/OFF" button.

## **6. PROGRAM SELECTION**

- According to the material and personal needs of the clothes, turn the knob to the required program, and then press the "START/PAUSE" button to start. When the machine is working, turning the knob again will not work. If you need to reselect the program, first press "START/PAUSE" button to pause and then select the program.

## **7. "START/PAUSE" BUTTON**

- After selecting the program, press this button to start the machine. If you press this button again or open the door in the process of work, the machine will enter the pause state. After the door is closed again, you need to press this key again, and the program will continue to run from the interrupt point.

## **8. "CREASE-RESIST" BUTTON**

- If you select this button, the clothes can't be taken out in time after drying, and it will roll automatically. When selected, the anti wrinkle light is on. This function can be added and selected after the program is selected by the knob. After drying, the "000" will be displayed, and the "END" function will be displayed after 10 minutes.

## **9. "TIMING SELECTION"**

- Turn the knob, can be timed from 30 minutes, 50 minutes, 70 minutes, 90 minutes, you can

choose the right drying time. This program does not do automatic judgment.

## 10. “CHILD LOCK” BUTTON

- At the same time, press and hold the "TIMING" and "CREASE-RESIST" buttons for 2 seconds, the machine enters the locking state, and the child lock light is on. Only the knob key is available for the machine, and other buttons are out of action. At the same time, press and hold the "TIMING" and "CREASE-RESIST" buttons for 2 seconds, the machine enters the unlocking state, and the child lock light is off.


## 11. “LED”

- When the program is selected, the approximate drying time is displayed. When the program is started, the display will show the remaining time.
- When there is a fault or incorrect operation, the fault code will be displayed.
- When the program ends, "END" is displayed.
- Select anti wrinkle function, anti wrinkle light on.
- After drying, the "FILTER" light of the clothes dryer is on to prompt cleaning, the next prompt for cleaning, and the light will be off after the next startup.
- When "ERR" is displayed at the same time, it means that the operation is invalid.

## 12. “MANUAL TEMPERATURE CONTROL” RESET BUTTON

- In the process of operation, if there is no heating, the manual temperature control may be disconnected. First turn the knob to the drying program, and then start the machine. After about 20 minutes, press the reset button.

Manual temperature control reset button

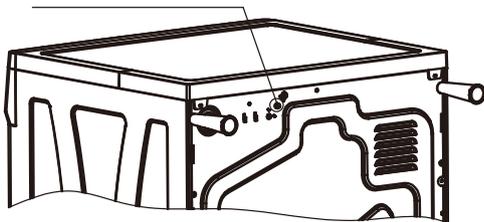

## 15. END

- After the end of all procedures, there is a wind-tunnel flow stage. After the completion of the program, "END" will appear on the display screen, and six alarm sounds will sound. No operation will be carried out. After 3 minutes, the machine will enter into sleep state. Turn off the power and the machine is in the off state.

## 16. AFTER USING

- After using of the machine, "Filter screen" light is on, please clean the filter.
- If the process is stopped before the machine is finished, please avoid removing the clothes in

time.

- During the drying process, if you want to reselect the program, first press the "START/PAUSE" button to pause the original program, then turn the "PROGRAM KNOB" to select a new program, and then press the "START/PAUSE" button to restart.

Note: Please do not worry if the clothes less than 2kg have not been dried after drying. It may be that the clothes are too few to touch the induction device. It is recommended to use the timing program to dry this type of clothes.



## DRY GUIDE

- The following types of clothing are not allowed to be placed in the dryer: special fine clothing such as mesh curtains, wool fabrics, silk, artificial materials with metal accessories, nylon tights, large items such as hooded windbreaker, blanket, duvet, duvet, sleeping bag and any clothing containing sponge rubber or similar substances.
- Follow the drying instructions on the clothing label.



It is usually used for machine drying.



Indicates conventional drying (high temperature).



Indicates gentle drying (low temperature).



It means that machine drying is not possible.

- Button up the pillowcase and jacket to prevent small items from getting entangled inside. Separate clothes according to the material and the degree of drying required.
- To prevent wrinkles and save energy, do not over dry.
- Don't put dark clothes with light colored fluffy objects, such as towels, because they will suck fur.
- Rotate and stir the clothes well before rolling to dry them.
- Fine clothes such as shirts should also be simply rotated and stirred before drying.
- Knitwear (knitted sweater, underwear) may shrink a little during the drying process, so do not over dry. It is suggested that the shrinkage factor should be considered when purchasing such clothing.
- To prevent static electricity after drying, you can add softener or softener for machine drying.
- After drying, please take out the clothes. If some clothes are still wet, you can continue to dry them, but do not exceed 30 minutes. Usually, some folded clothes such as neckline need this


step.

- Before putting clothes into the machine, please take out all metal objects (such as hairpins, safety pins, pins, etc.)
- Please remove stubborn stains before drying.
- Special treatment curtain: take off the hook and tie it in the net bag.




## Maintenance and cleaning


- Before any maintenance and cleaning of the machine, please disconnect the power supply.
- Housing cleaning: only use soap and water for cleaning and then wipe thoroughly.
- Important: do not use alcohol, diluents and similar items to clean the outside of the housing.
- Clean the inside of the door regularly to remove the fluff around the filter screen and in the door seam.
- Only when the filter screen is clean can the machine work normally and efficiently. During the drying process, the filter will collect the fluff. When cleaning, please take out the filter screen inside the machine and clean the filter screen with warm water dipped in a brush.
- Warning: do not use this machine without a filter. Otherwise, it will damage the machine and clothes, and even cause danger.
- Open the door, take out the filter screen and install it as shown in the figure below. If the filter is not installed, the machine may be damaged.

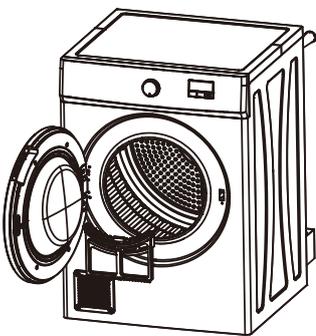

1

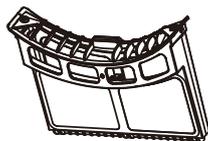

2

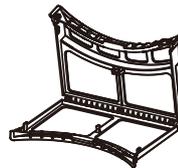

3



4




## TROUBLE SHOOTING

- Some faults are caused by the lack of simple maintenance and inspection, which can be easily solved without maintenance personnel. Please read the common faults and solutions listed below carefully before you call for repair.

- When the machine fails, the machine will display the fault code. Please remove it according to the following table. After troubleshooting, press the "START/PAUSE" button again to restart the program. If the problem still exists, please contact us.

Problem	Display	Cause	Solution
Totally no working	No display	The plug is not plugged in properly. It is in the shutdown state	Plug the plug tightly and press the ON/OFF button for a long time
	No display	The socket has no electricity or the fuse is blown	Ask the electrician to check the socket
	Displays DOP	The door is open	Power on and restart as required
	Display normal	No press the "START/PAUSE" button	Press the "START/PAUSE" button
The drying effect is not ideal	Display normal	Program selection error	Please reselect the procedure according to the drying schedule
	Display normal	Filter screen clogging	Clean the filter screen
	Display normal	Unreasonable amount of dry clothes	Please check the recommended dry weight
	Display normal	There is something attached to the humidity sensor	Cleaning the surface of humidity sensor
The drying cycle ends soon after the procedure begins	END	Too little clothes	If there is too little dry clothes, it is recommended to choose the regular drying procedure
	END	The added clothing is too dry for the selected procedure	Choose a higher drying standard For example, use extreme dry instead of standard
The program took too long to run	Display normal	Too much clothes	Reduce the amount of clothing
	Display normal	The clothes didn't spin-dry first	The clothes should be spin-dried before they are put into the dryer
Door lock failure	Display DOP	Door open	Close the door
		The wiring terminal is not plugged in properly or the wiring harness is faulty	Please have professional maintenance personnel overhaul.
		Door lock failure	Please have professional maintenance personnel overhaul.
		Computer board failure	Please have professional

			maintenance personnel overhaul.
Abnormal temperature	E1	The wiring terminal is not plugged in properly or the wiring harness is faulty	Please have professional maintenance personnel overhaul.
		Computer board failure	Please have professional maintenance personnel overhaul.
		Temperature sensor failure	Please have professional maintenance personnel overhaul.
Heating wire failure	E2	The wiring terminal is not plugged in properly or the wiring harness is faulty	Please have professional maintenance personnel overhaul.
		Heating wire failure	Please have professional maintenance personnel overhaul.
		Computer board failure	Please have professional maintenance personnel overhaul.

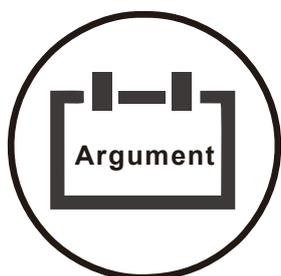

## SPECIFICATION SHEET

<b>Model</b>	OC-GYJ8022
<b>Voltage</b>	220V / 50-60Hz
<b>Capacity (kg)</b>	8.0
<b>Power(W)</b>	1800W
<b>Net weight(kg)</b>	30
<b>Gross weight(kg)</b>	33
<b>Product size(mm)</b>	555x598x845
<b>Package size(mm)</b>	580x650x880

Note: our company reserves the right to change the design of the product. The product you purchased may have been improved and not completely consistent with the manual, but the performance and use method will not be changed. Please feel free to use it.



## ENVIRONMENTAL FRIENDLY MATERIALS

### PACKAGING MATERIALS

If there is a "♻️" mark on the material, it indicates that it can be recycled.

>PE >PS >PP

#### Correct Disposal of this product




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**In order to save energy and protect the environment, we propose the following:**

- Try to make the machine work more load, because small load work is not economic.
- To avoid wrinkling and save energy, do not dry the dry clothes.
- Choose the drying procedure according to the drying procedure and type of clothes.
- Clean the filter screen regularly to avoid increasing drying time and wasting power.
- Keep indoor ventilation and the indoor temperature should not exceed 35 °C.

### WIRING DIAGRAM

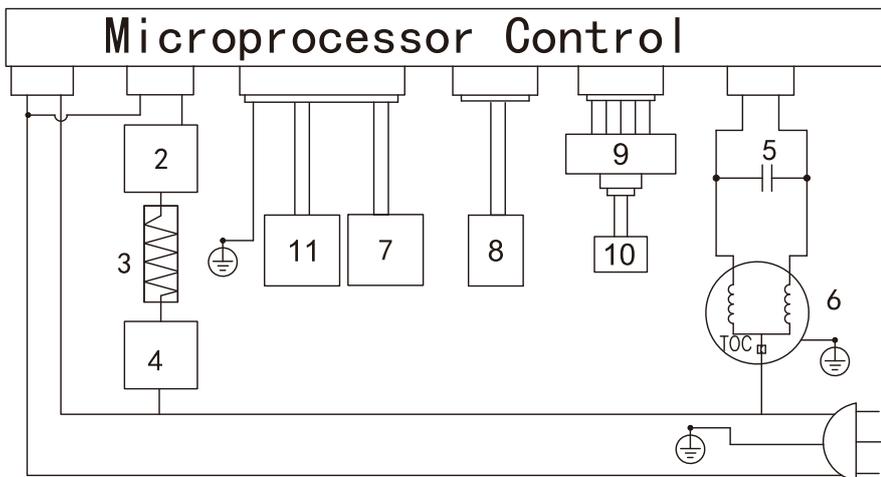

1. Plug 2. Non-self-resetting thermal cut-out 3. Heater 4. Self-resetting temperature controller 5. Capacitor 6. Motor 7. Temperature sensor 8. Door switch 9. PCB 10. Light 11. Humidity sensor

---

## **HZH MARINE GROUP CO., LTD**

Tel: +86 20 82369196    Email: [info@hzhmarine.com](mailto:info@hzhmarine.com)  
Web : [www.hzhmarine.com](http://www.hzhmarine.com) / [www.huazhihang.com](http://www.huazhihang.com)  
Contents of this brochure could be changed without written notice.