


User Manual



Contents

PRODUCT OVERVIEW	2
SPECIFICATION	3
ABOUT CHARGE	4
INSERTING MEMORY CARD	4
BASIC OPERATION	5
TURN ON AND TURN OFF	5
NIGHT VISION ENHANCED MODE	5
NEW AND SPECIAL COLOR EFFECTS:	6
DISPLAY SELECTION	6
ADJUST THE DISPLAY	6
CHANGING THE MODES	8
TAKING PICTURES	9
RECORDING VIDEO	10
DEVICE POWER OFF	12
POOR IMAGE	13
IR – LED (NIGHT VISION FUNCTION)	13
SETTINGS IN PHOTO AND VIDEO MODE	14
PLAYBACK	16
STRAP LANYARD INSTALLATION	17
DOWNLOAD FILES TO PC	19
NOTES ON CLEANING	21
WARM TIPS	21

Product Overview

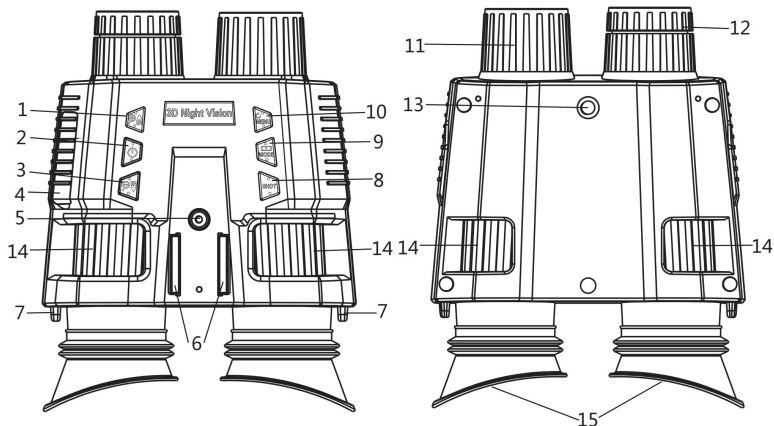

1. IR Up/Zoom in/Up Button	2. Power Button
3. IR Down/Zoom out/Down Button	4. USB port/Micro SD card slot Cover
5. Helmet bracket fixing screw	6. Helmet bracket chute
7. Strap Hole	8. Shot button
9. Mode Button Lens	10. Menu Button
11. IR LEDs	12. Lens focus wheel
13. Tripod fixing screw	14. Eyepiece diopter adjusting wheel
15. View Area /display screen	

Specification

Photo Resolution: 360P ENV、36M、12M、8M、5M、3M、2M、1M

Video Resolution: 360P ENV、4K、FHD、HD

Sensor:1.3MP Starlight sensor

Display Screen:Inner screen is 1.4" 390* 390 HD TFT , 7-level brightness adjustment, free switching between single and double screens, 7X magnification

Eyepiece: Fully independent binocular technology, can independently adjust the vision compensation of left and right eyes (refractive adjustment range +/-3, both myopia, farsightedness 300 adjustment compensation)

IR LED:3W,850nm strong infrared spotlight ,7 grades infrared adjustment.

Lens: F1.4 larger aperture, f=25mm, FOV 10°

Auto power off : 1 min/3 min/ 5 min/ 10 min/ OFF

View Distance:200m~250m full black observation distance, 1m~infinity low light observation distance

Digital Zoom: Digital Zoom 8X

Power Source: 3.7V, 3000MAH lithium battery


Environment temperature: operation temperature: -10℃to + 50℃; storage temperature: -20℃ to +60℃

Dimensions: approx. 152mm*122*55mm

Weight: about 440g with battery

About Charge

The device has a built-in rechargeable battery, please fully charge it before first use.

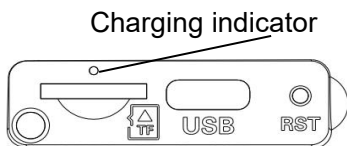

Please use a universal USB power adapter* (DC 5V/2A) (*not included) to charge this machine. When charging, the charging indicator on the left side of the TYPE-C USB port will turn red; when fully charged, the charging indicator will turn off. (If the machine is fully charged, it can be fully charged in about 4 hours.)

Inserting Memory Card

- ◆ Please prepare a Class 10 Micro card (up to 32GB) in advance.
- ◆ Open the card slot cover, you will see the card slot.
- ◆ Insert the Micro SD card into the slot. Make sure the direction is right. Never insert the card forcibly.
- ◆ Format the Micro SD card, this can improve the compatibility of Micro SD card.

◆ To remove the card from the memory card slot of the device, press the edge of the memory card in gently, the card will pop out. Then remove the card.

Note: If the TF card is not inserted or the card is not inserted correctly, the prompt icon of SD card and the number of photos or recording time will not appear on the screen when the machine is turned on. When pressing the shoot button, the prompt of "No card" will appear.

Basic operation

➤ Turn On And Turn Off

Long press the POWER button for 3 seconds to turn on the device. Long press the POWER button for 3 seconds again to turn off the device.

➤ Night Vision Enhanced Mode

Night vision enhancement mode is twice as bright as normal night vision mode;

In photo or video mode, short press the power button to quickly switch to night vision enhancement mode; You can also select **"360P ENV"** in the Video/Photo Resolution of the menu to set.

Notice:The resolution of night vision enhancement mode (360P ENV) is VGA, the image noise will be slightly larger and the digital zoom can not be used.

➤ **New and Special Color Effects:**

Luminous Green Color Effect & Film Color Effect.

These 2 color effects are available in both normal mode and infrared night vision mode.

Steps:

Long press "Menu" ->Luminous Green Color Effect,

Long press "Menu" ->IR light Color Effect,

Long press "Menu" ->Get back to the normal color mode.

➤ **Display selection**

After you turn on the device,please long press "MODE" button for 3 seconds to switch the display of the single sided display (left) and then long press "MODE" button for 3 seconds to switch the display of the single sided display (right) and then long press "MODE" button for 3 seconds to switch dual display.

➤ **Adjust the display**

After you turn on the device,please press the MENU button

to enter the menu. When you viewing the eyepiece/ display screen if the MENU font is not clear enough, please adjust the eyepiece diopter adjustment wheel until the MENU font looks clear, press the MENU button again to exit the MENU. Then adjust the focus wheel to focus according to the actual distance of the viewed scene until the screen is clearly displayed.

The diopter can be adjusted separately by the two eyepieces, the specific steps are as follows:

1. After power on, long press the MODE button to switch to the left display screen alone, short press the MEUN button to enter the menu and adjust the left eyepiece diopter adjustment wheel according to your needs until the menu display is the clearest (if you have myopia, The eyepiece lens is adjusted inward; if hyperopia, please adjust it outward, and normal vision is basically adjusted in the middle position);

2. Long press MODE button again to switch to a separate display on the right side of the screen, short press MEUN button to enter the menu and then adjust the

refractive adjustment wheel on the right side of the eyepiece according to your needs to display the menu as clear as possible (adjust the eyepiece lens outside and inside, adjust the eyepiece lens outside for hyperopia, and adjust normal vision in the middle);

3. Press MODE button again to switch to dual display, then aim at the viewing target and adjust the lens focusing wheel until the display is the clearest.

If the light is insufficient or using at night, please press the IR Up/Zoom in/Up Button to turn on the infrared light and please select the IR gear according to the light at that time. The darker the light, the higher the gear adjustment. Long press the IR Up/Zoom in/Up Button to zoom.

➤ **Changing The Modes**

The night version has 3 different modes : photo mode, video mode and playback mode. Press the Mode button can change mode.


	Photo Mode	For taking still photos.
	Video Mode	For recording video.



Playback Mode

For playing the recorded files.

➤ Taking pictures

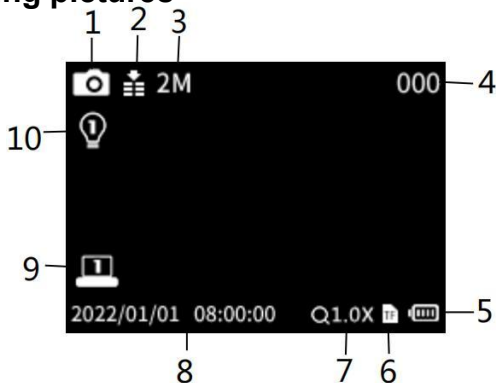

1.Camera mode	2.Night vision sensitivity
3.Photo resolution	4.Number of pictures that can be taken
5.Battery status	6.Micro SD card prompt
7.Digital zoom indication	8.Shooting time stamp
9.Display brightness	10.Infrared light gear

1. Turn on the device,the default is Video mode. Please press the Mode button to switch to photo mode.

2. Zooming:

Keep pressing the  or  button to zoom in or zoom out the image. the value of magnification level appears on the

LCD screen.

3. Take a still photo.


- View your subject via the LCD screen.

-Adjust the focus by turning the focus wheel.

For night or insufficient light use,turn on the IR by pressing the IR Up/Zoom in/Up Button.Increase the brightness by pressing the button repeatedly.It has 7 levels of brightness(0> 1> 2> 3> 4> 5> 6> 7> 0...)The brightness can be adjusted according to your needs.The darker the light, the higher the gear adjustment.

- Press the Shot button to take a photo.

➤ Recording Video

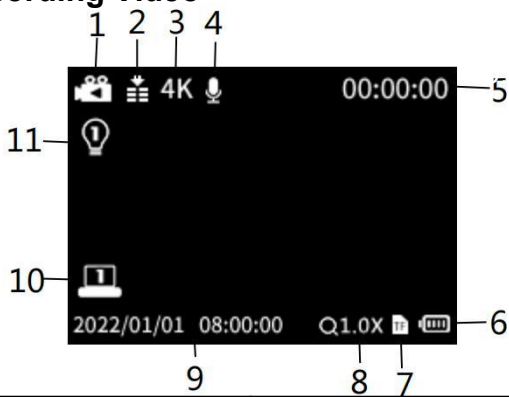

1.Video mode	2.Night vision sensitivity
3.Video resolution	4.Recording switch indication

5.Available video recording time	6.Battery status
7.Micro SD card prompt	8.Digital zoom indication
9.Shooting time stamp	10.Display brightness
11.Infrared light gear	

1. Turn on the device,the default is Video mode. If not, press the Mode button to switch to Video mode.
2. Zooming: Keep pressing the  or  button to zoom in or zoom out the image. The value of magnification level appears on the LCD screen.
3. Start to record video.
 - View your subject via the LCD screen.
 - Adjust the focus by turning the focus wheel

For night or insufficient light use,turn on the IR by pressing the IR button.Increase the brightness by pressing the button repeatedly.It has 7 levels of brightness(0> 1> 2> 3> 4> 5> 6> 7> 0...)The brightness can be adjusted according to your needs,darker and need adjusted more brightness.


 - Press the Shot button to start to record.The record duration will be shown on the LCD screen.

4. Finish recording.

- Press the Shot button again to stop recording.
- The device will stop recording automatically once capacity of the memory card is full.

Notice:

➤ **Device Power Off**

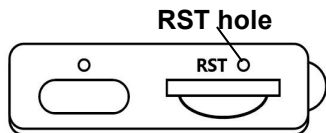

1. If the device is fully charged and cannot be turned on or the screen cannot move during use and cannot be turned off, please insert a small hard strip such as toothpick or wire into the RST hole, when you feel the resistance, press it and then turn it on .

2. Please use a universal USB power adapter* (DC 5V/2A) (*not included) to charge this device. After the USB is connected to the device, when the red light of the charging indicator of the device is on, long press the power button to turn on the device , unplug the TYPE-C USB to turn off the device ,which means that the built-in battery has no power and it needs to be fully charged or connected to an external mobile power supply.

➤ **Poor Image**

- ◆ If you wear glasses, please keep them on while using the device.
- ◆ If at day, make sure the IR is off (if IR is on, screen is black and white or the screen is colored)
- ◆ If at night, make sure you have turned on the IR, press IR up (if IR is on, screen is black and white).
- ◆ Adjust the focus by slowly turning the Focus wheel . Make sure it is focused.

IR – LED (Night vision function)

1. Regarding manual focusing: users can manually focus the focus wheel according to the actual observation distance to debug the best focus until the display is clear.

2. In photo/video mode, if you have to view the darkness environment, please short press IR UP button to activate the IR LED, the image will change to black and white. The IR LED have seven levels, short press IR UP button to up the level, short press IR DOWN button to down the level.

(If the battery voltage is not enough, the IR LED level will down automatically. IR level can up to 7 levels when the battery power is full. If only left half power, the level just can up to 5. If only left 25% power, the level just can up to 3. If

the battery power is lower than 25%, IR LED cannot be activated.)

➤ **Settings in Photo and Video Mode**

Press Menu button in photo or video mode, can change the settings.

Menu	Function
Video Resolution	Set the video resolution. Options:360P ENV/HD/FHD/4K
Photo Resolution	Set the photo resolution. Options:360P ENV/1M/2M/3M/5M/8M/12M/36M.
Night vision sensitivity	Choose the night vision sensitivity. Options:[Low]/[Middle]/[High].
Screen brightness	Adjust the screen brightness as required. Options:[Level1]/[Level 2]/[Level 3]/[Level 4]/[Level 5]/[Level 6] /[Level 7].
Display Mode	The display size can be selected according to your needs. Options :[Full]-- Full screen (The picture seen on the screen is slightly elongated and deformed, images and video files are normal). [Normal]--16:9 Narrow screen display.
Video Frame	You can set different frame rates according to different scenes (the lower the frame rate, the

	higher the night vision brightness, but the more sluggish the video picture when moving). Options: Auto /5FPS/10FPS/15FPS/20FPS/ 25FPS /30FPS
Audio	ON / Off.
Date Tag	ON / Off.
Date Setting	Set the date and time of device.Press the up or down button to adjust the date or time, press the OK button to move the cursor between settings , select "Confirm" and press the OK button to complete all Settings.
Auto power-off	Set the time to shut down the device for power saving if the device is idle. Options:[Off]/[1min]/[3min]/[5min]/[10min].
Language Setting	Set OSD (on-screen) language. Options:[English]/ [简体中文]/[繁体中文]/[日本語] /[한국어]/[Русский]/[Français]/[Deutsch] / [čeština]/[Portugués]/[Polski]/[Nederlands]/ [Türkiye]
Power Frequency	Set the light source frequency to match frequency of electricity supply in local region to prevent interference.Options:[50Hz]/[60Hz]
Date Label	Add the date stamp on the photo or video files.Options:[Yes]/[No].

Format	Format your Micro SD card. Format Micro SD will delete all files including the protected files. Please copy the important files before confirm.Options:[Confirm]/[Cancel].
Restore System	Restore the setup to factory default settings. Options:[Confirm]/[Cancel].
Version	User can see the firmware version information.

➤ **Playback**

1.Turn on the device, press the Mode button to switch to playback mode.

2.Press Up/Down button to view photos and video files.

3.Playback the video

- Press the Shot button to start playing the video files.
- Press the Shot button again to have a pause.
- Press Menu button to stop the current video playing.

Press Menu button in playback mode,the screen will display the playback menu.Press Up/Down button to scan lock or delete. And press Shot button to select one to enter the sub-menu.


Playback menu list :

Menu	Function
Delete	Delete the current file in memory card. Options:[Confirm]/[Cancel].
Delete All	Delete all files in memory card. Options:[Confirm]/[Cancel].
Lock This	Lock the current file in memory card. Options:[Confirm]/[Cancel].
Unlock This	Unlock the current file in memory card. Options:[Confirm]/[Cancel].
Unlock All	Unlock the all files in memory card. Options:[Confirm]/[Cancel].

Strap lanyard installation

Steps for installing :

1. Take one end of the Webbing out of the Buckle first (as shown below);

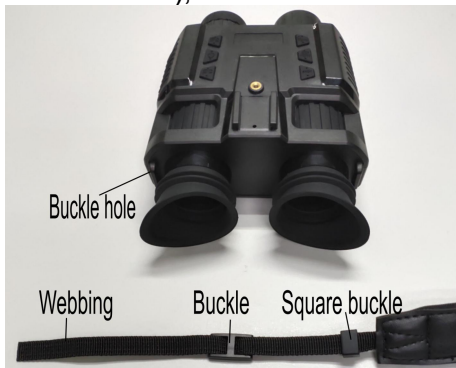

2. Thread the Webbing with the Buckle and the square buckle into the Buckle hole of the device (as shown below);



3. Pull the Webbing in the Buckle slightly loose (as shown below);



4. Insert the Webbing head into one hole of the Buckle and out through the other hole (as shown below);



5. After straighten the Webbing and tidy up, put the Webbing head into the Square buckle (as shown below).



Download files to PC

There are two ways to download files from the device to a

computer:

- By inserting the memory card into a card reader.
- By connecting the device to a computer using the supplied USB cable.

Using a Card Reader

1. Eject the memory card from the device and insert it into a card reader. Then connect the card reader to a computer.
2. Open [My Computer] or [Windows Explorer] and double-click the removable disk icon that represents the memory card.
3. Copy images from the card into a directory of your choice on the computer's hard disk.

Connecting the Device to a PC through the USB Cable

1. Turn on the night vision. Connect it to a computer through the supplied TYPE-C USB cable.
2. Select the "Memory" on the screen and press the OK button to enter the removable disk mode.
3. Open [My Computer] or [Windows Explorer].

A "Removable Disk" appears in the drive list. Double-click the "Removable Disk" icon to view its contents. Files stored on the camera are located in the folder named "DCIM".

4. Copy the photos or files to your computer.

NOTES on Cleaning

Before cleaning the device, disconnect it from the power supply! Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid. Clean the eyepieces and/or lenses only with a soft, lint-free cloth, (e.g. microfibre cloth). To avoid scratching the lenses, use only gentle pressure with the cleaning cloth. Protect the device from dust and moisture. Store it in a bag or box.

Warm Tips

This night vision device has a small lens angle and is mainly suitable for viewing long-distance environments. It is recommended not to wear the night vision device to walk, so as not to fall. When walking, please turn the night vision device up and absorb it to the helmet bracket.


使用说明书



目录

产品外观.....	24
规格参数.....	24
关于充电.....	25
插入内存卡.....	26
基本操作.....	26
开关机.....	26
夜视增强模式.....	26
颜色特效功能.....	27
显示屏选择.....	27
调整模式.....	28
拍照模式.....	28
录像模式.....	30
设备不开机:.....	31
图像不佳.....	31
IR - LED 夜视功能:.....	32
拍照和录像模式下菜单.....	32
回放模式下菜单:.....	35
背带挂绳安装.....	35
下载文件到电脑.....	37
使用读卡器.....	38
通过 USB 线将摄像机连接到计算机.....	38
清洁机器.....	38
温馨提示:.....	39

产品外观

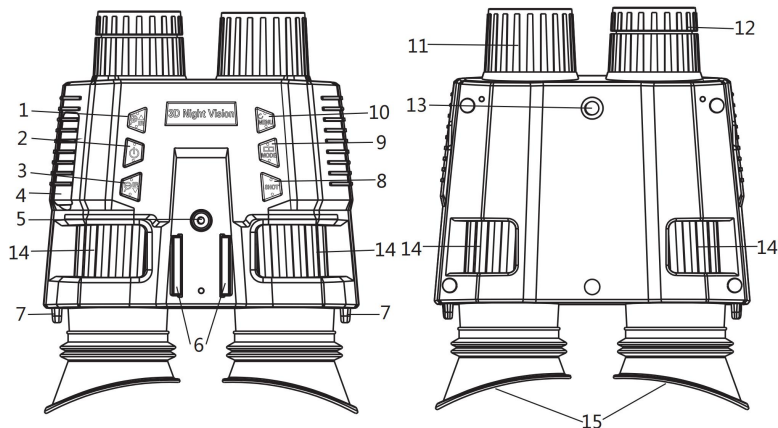

1. IR 加档/放大/向上键	2. 电源键
3. IR 减档/缩小/向下键	4. USB 接口/复位孔/TF 卡槽盖
5. 头盔支架固定螺丝	6. 头盔支架滑槽
7. 挂绳孔	8. 快门键
9. 模式键	10. 菜单键
11. 红外发射器	12. 镜头调焦轮
13. 三脚架固定螺丝	14. 目镜屈光度调节轮
15. 目镜/显示屏	

规格参数

- 照片分辨率: 360P 夜视增强、36M、12M、8M、5M、3M、

2M、1M

- 视频分辨率: 360P 夜视增强/4K/FHD/HD
- Sensor:1.3MP 星光 sensor
- 显示屏: 内置双屏 1.4" 390*390 TFT 内屏, 7 档亮度调节, 单双屏自由切换显示, 7 倍放大
- 目镜: 完全独立的双目镜技术, 可独立调节左右眼的视力补偿(屈光调节范围正负+/-3,既近视, 远视 300 调节补偿)
- 红外灯: 3W,850nm 强红外聚光灯, 7 档红外调节
- 镜头: F1.4 大光圈, $f=25\text{mm}$, FOV 10 度
- 自动关机: 3 分钟/ 5 分钟/ 10 分钟/ OFF
- 观察距离: 200 米~250 米全黑观察距离, 1 米~无限远弱光观察距离
- 放大倍数: 数字变焦 8 倍
- 电源: 3000MAH 锂电池
- 环境温度:操作温度'-20°C to +50°C, 储存温度'-30°C to +60°C
- 尺寸和重量:约 152mm*122*55mm, 带电池约 440g 克

关于充电

机器本身具有内置的可充电电池, 首次使用前请将其充满电。

请使用通用的 USB 电源适配器* (DC 5V / 2A) (*不包括在内) 为本机器充电。充电时, TYPE-C USB 端口左侧的充电指示灯将变为红色; 充满电后, 充电指示灯关闭。(若机器在完全没电的情况下充电, 大概充 4 小时能充满。)



插入内存卡

- ◆ 请提前准备好一张 class 10 的 TF 卡（最大支持 32GB）。
- ◆ 打开 TF 卡槽盖可看见卡槽。
- ◆ 确保 TF 卡方向正确，插入 TF 卡，禁止强制插卡。
- ◆ 使用前先格式化 TF 卡，可提高电池寿命和快门速度以及 TF 卡的兼容性。
- ◆ 轻按 TF 卡边缘，可弹出 TF 卡。

注意：若没有插入 TF 卡或者卡没有插对，开机时显示屏不会出现 SD 卡提示图标和可拍照片张数或录像时间，按快门键时会出现“无 SD 卡”这样的提示。

基本操作

➤ 开关机

长按电源键 3 秒可开启夜视仪。再次长按电源键 3 秒可关闭夜视仪。

➤ 夜视增强模式

夜视增强模式比普通模式的夜视亮度要高一倍；

在拍照或者在录像模式下，短按电源键可快速切换到夜视增强模式；也可以在菜单的分辨率选项里选择“360P 夜视增强”进行设定。

注：夜视增强模式的分辨率为 VGA，影像噪点会稍大，不能数码变焦。

➤ 颜色特效功能

在正常彩色模式和开红外灯夜视黑白模式下都可分别开启颜色特效功能：

长按“MENU”键3秒---》切换“夜光绿”颜色效果，
长按“MENU”键3秒---》切换“红外光”颜色效果，
长按“MENU”键3秒---》返回正常颜色模式。

➤ 显示屏选择

开机后长按“MODE”键3秒切换单筒（左）显示，再长按“MODE”键3秒切换单筒（右）显示，再长按“MODE”键3秒切换双筒显示。

显示屏调节

开机后按MENU键后进入菜单，查看目镜/显示屏，若菜单字体不够清晰，可调节目镜屈光度调节轮，直到菜单字体看起来清楚为止，再次按MENU键，退出菜单。然后根据观看的景物实际距离调节调焦轮进行调焦直至屏幕显示清晰为止。

两个目镜可以分开调节屈光度，具体步骤如下：

1. 开机后，长按MODE键，切换到单独显示左边显示屏，短按MEUN键，进入菜单，根据您的需要进行调节左边目镜屈光调节轮，菜单显示达到最清楚为止（若有近视眼的话，

目镜镜片向内调；若是远视眼请往外调，正常视力基本都调在中间位置）；

2. 再次长按 MODE 键，切换到单独显示右边显示屏，短按 MEUN 键，进入菜单，再根据您的需要调节右边目镜屈光调节轮，菜单显示达到最清楚为止（近视眼目镜镜片外内调，远视眼往外调，正常视力基本都调在中间位置）；

3. 再次长按 MODE 键，切换到双屏显示，再对准观看目标，调节镜头调焦轮，显示屏看到最清晰为止。


若光线不足或者是在晚上使用时，请短按 IR 加档按键打开红外灯，请根据当时的光线选择 IR 档位。光线越暗，档位调节要越高。长按 IR 向上键可变焦。

➤ 调整模式

此款夜视仪有 3 种模式：拍照模式，录像模式和回放模式。按模式键可切换不同模式。

	拍照模式	拍摄静止图片
	录像模式	录制视频
	回放模式	回放图片/视频文件

➤ 拍照模式

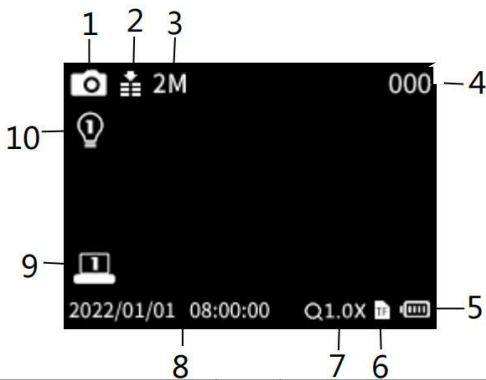

1. 拍照模式	6. TF 卡提示
2. 夜视灵敏度	7. 数码变焦指示
3. 照片分辨率	8. 拍照时间戳
4. 可拍图片张数	9. 显示屏亮度档位
5. 电池电量	10. 红外灯亮度档位

1. 开机后默认为录像模式，如要拍照，请按模式键切换至拍照模式。

2. 缩放: 长按 $\oplus$ 或 $\ominus$ 键可放大或缩小图像。缩放值会显示在 LCD 屏幕上。

3. 拍照

- 镜头对准目标物，通过屏幕观察。

-通过转动调焦轮调整聚焦,屏幕显示最清晰为准

若在夜间或光线不足的情况下使用时，按下红外按钮打开红外。反复按下按钮，增加亮度。它有 7 个亮度等级(0 > 1 > 2 >

3 > 4 > 5 > 6 > 7 > 0...)可根据实际的光线调整 IR 灯的档位。光线越暗，档位调节要越高。

- 按快门键拍摄照片。

➤ 录像模式



1.	录像模式	7.	TF 卡提示
2.	夜视灵敏度	8.	数码变焦指示
3.	录像分辨率	9.	拍摄时间戳
4.	录音开关指示	10.	显示屏亮度档位
5.	可录像时长	11.	红外灯亮度档位
6.	电池电量		

1. 开机，开机后默认为录像模式，如果不是按模式键切换至录像模式。

2. 缩放：长按 $\oplus$ 或 $\ominus$ 键可放大或缩小图像。缩放值会显示在 LCD 屏幕上。

3. 开始录像

- 镜头对准目标物，通过屏幕观察。
 - 若在夜间或光线不足的情况下使用时，按下红外按钮打开红外。反复按下按钮，增加亮度。它有 7 个亮度等级(0 > 1 > 2 > 3 > 4 > 5 > 6 > 7 > 0...)可根据实际需要调整亮度。光线越暗，档位调节要越高。
 - 按快门键开始录像。录像时长会显示在屏幕上。
4. 结束拍摄
- 再次按快门键停止录像。
 - 当内存容量满时，机器将自动停止录像。

注意：

● 设备不开机：

1. 如果充满电设备不开机，或在使用中画面不动不能关机，需用如牙签铁丝等小小硬的条状物插入 RST 孔里感觉碰到阻力后按一下，有按键动作手感后再开机。
2. 请使用通用的 USB 电源适配器*（DC 5V / 2A）（*不包括在内）为本机器充电。TYPE-C USB 与机器连接后，当机器的充电指示红灯亮，长按开机键可开机，拔掉 TYPE-C USB 关机表示内置电池没电，需要充满电或外接移动电源使用。



● 图像不佳

- ◆ 如果您戴眼镜，使用头盔或头盔帮带时请在使用时

取下眼镜，不使用头盔可戴上眼镜使用设备。

- ◆ 若在白天使用时，请确保红外灯已关闭（如果红外灯打开，则屏幕显示为黑白若红外灯关闭时屏幕显示为彩色）如果在晚上或者光线不足的情况下使用，请确保已打开 IR，然后向上按 IR（如果 IR 打开，则屏幕为黑白）根据实际情况调整最合适的亮度。
- ◆ 通过缓慢转动调焦轮来调节聚焦。确保已对焦。

IR - LED 夜视功能:

- 1. 关于手动调焦：** 用户可以根据实际的观察距离手动调焦调焦轮调试最佳的焦距，直至显示清晰为止。
- 2. 在拍照/录像模式下，如需要观察较暗环境时，请短按 IR 加档按键打开红外灯，此时图像会变成黑白。红外灯共有 7 个档位，通过按 IR 加档键加档，按 IR 建档键时减档。（电池电压不够时也会自动减档：满电时可以开到 7 档，2 格电时只能开到 5 档，一格电时只能开到 3 档，低于一格电不能开红外灯）。**

➤ 拍照和录像模式下菜单

在拍照和录像模式下，按菜单键可修改设置。

菜单	功能
录像分辨	设置视频分辨率。

率	选项:360P 夜视增强/HD/FHD/4K
拍照分辨率	设置图片分辨率。选项:360P 夜视增强、1M、2M、3M、5M、8M、12M、36M
夜视灵敏度	选择夜视灵敏度。选项:[低]/[中]/[高]。
屏幕亮度	可调节显示屏亮度。可根据需求调节屏幕亮度。选项:[亮度 1]/[亮度 2]/[亮度 3]/[亮度 4]/[亮度 5]/[亮度 6]/[亮度 7]
显示模式	可根据需要选择显示屏的显示模式。 选项:[原比例]--16:9 窄屏显示。 [全屏显示]--满屏显示（在屏上看到的画面稍微拉长变形，所拍摄的照片和视频文件是正常的）。
视频帧率	可以根据不同的场景选择设定不同的帧率（帧率越低，夜视亮度越高，但移动时视频画面越卡顿）。选项:自动/5FPS/ 10FPS/ 15FPS/ 20FPS/ 25FPS /30FPS
录音功能	开/关
时间标志	开/关
时间设定	设置机器的时间和日期。按向上或向下键调整时间，按 OK 键在设置之间移动光标，选到“确认”按 OK 键完成所有设定。
自动关机	设置机器闲置时自动关机的时间，以便节省电量。选项:[关]/[1 分钟]/[3 分钟]/[5 分钟]/[10 分钟]

语言	选择屏幕显示语言。选项:[English]/[简体中文]/[繁体中文]/[日本語]/[한국어]/[Русский]/[Français]/[Deutsch]/[čeština]/[Portugués]/[Polski]/[Nederlands]/ [Türkiye]
电源频率	根据你所在地区设置光源频率。 选项:[50Hz]/[60Hz]
格式化	格式化存储卡会删除包括锁定文件在内的全部文件。格式化前，请将重要文件拷贝到电脑中。 选项:[是]/[否]
重设系统	恢复所有设置为出厂值。选项:[确认]/[取消]
软件版本	用户可以查看机器当前的固件版本信息

➤ 回放

1. 开机，按模式键切换至回放模式。
2. 按上/下键浏览照片和视频文件。
3. 回放视频
 - 按快门键开始播放录像视频。
 - 再次按快门键暂停播放。
 - 按菜单键停止播放当前视频。

回放模式下，按菜单键显示回放菜单。按上/下键选择“文件锁定”和“文件删除”。按快门键确定选择一项菜单进入选项界面。按菜单键返回上一级。


回放模式下菜单:

菜单	功能
删除	删除当前文件。选项:确认/取消
删除所有	删除所有文件。选项:确认/取消
加锁当前	加锁当前文件。选项:确认/取消
解锁当前	解锁当前文件。选项:确认/取消
解锁全部	解锁全部文件。选项:确认/取消

背带挂绳安装

背带挂绳安装步骤:

1. 先将一端织带从日字扣中取出 (如下图) ;

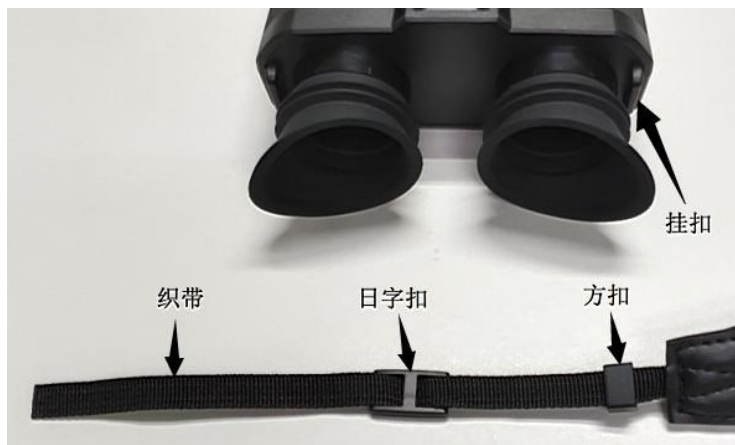


2. 将有日字扣和方扣的织带, 穿入机器的挂扣中 (如下图);



3. 将在日字扣里的织带稍稍拉松一点 (如下图) ;



4. 将织带头穿入日字扣的一个口里并从另一个口穿出(如下图);

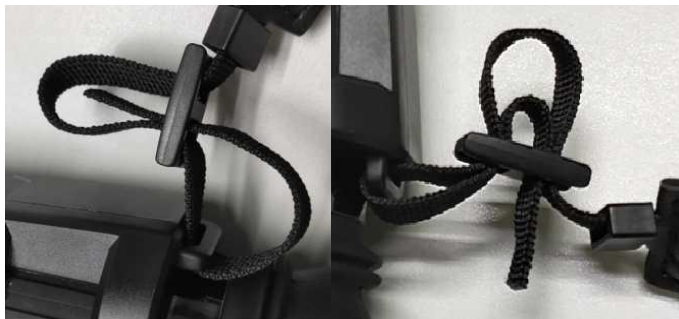

5. 拉直织带，整理好后，将织带头套入方扣中（如下图）。



下载文件到电脑

有两种方法可以将图像从夜视仪的存储卡下载到计算机中：

1. 将 TF 卡插入闪存读卡器中
2. 用附带的 TYPE-C USB 线将夜视仪与电脑相连。

使用读卡器

1. 将 TF 卡从机器中弹出，然后插入读卡器，连接到电脑。
2. 打开[我的电脑]或 Windows 资源管理器，双击代表存储卡的可移动磁盘。
3. 将文件从存储卡上拷贝到计算机中你选择的目录下。

通过 USB 线将摄像机连接到计算机

1. 开启夜视仪。通过 TYPE-C USB 线将机器连接到计算机。
2. 在屏幕上选中“存储器”，按 OK 键确定后，进入可移动盘模式。
3. 打开[我的电脑]或 Windows 资源管理器。双击代表存储卡的可移动磁盘。
4. 将文件从存储卡上拷贝到计算机中你选择的目录下。

清洁机器

在清洗机器之前，请先断开电源！

只需用一块干布清洁机器的外部。为了避免损坏机器，不要使用任何清洁液。清洁目镜和/或镜片时，请使用柔软的无绒布(如超细纤维布)。为了避免刮伤镜片，只需用清洁布轻轻按压即可。

保护好机器免受灰尘和潮湿，用袋子储存或者储存在包装盒内。

温馨提示:

本夜视仪镜头视角较小,主要适用于观看远距离的环境, 建议不要戴上夜视仪行走,以免摔跤,走路时请把夜视仪上翻吸到头盔支架上。

